

SAILABILITY BAYSIDE PROCEDURES

SAILING FOR PEOPLE WITH DISABILITY

For Operating Faith - a 7.4m keel boat

Faith's skipper

Faith Skipper's responsibilities

- The safety of Faith and all persons on board
- The operation of Faith according to the law and the conditions contained in this procedure.
- The positive control of any situation that may arise whilst operating Faith.
- The training and certification of crew

Faith's skipper is required to,

- Have been certified as competent by persons authorised to do so by the committee
- Either hold a current first aid certificate or ensure the crew or a carer holds a current first aid certificate.

Reporting

The skipper reports to the Officer of the Day (OOD).

Faith's Crew

The crew is required to,

- Undergo training to enable certification as competent by a Faith skipper
- The skipper/s provide the training and certification

Reporting

Crew reports to the skipper.

Faith's Complement

- The maximum complement is 10 persons, including skipper and crew.
- The skipper is responsible for determining client to carer ratio
- The skipper has discretion to decide actual complement numbers up to 10 persons, dependent on sailing conditions and make up of complement.

Faith's Permanent Berth & Operating Pontoon

The permanent berth for Faith is located at the Queensland Transport Marina opposite DPSS. Access is from the William Gunn jetty. Keys are available in the normal location.

During Sailability operations, Faith operates from the DPSS pontoon.

Before Leaving the Permanent Berth

Prepare Faith as per the Check Sheet (see Attachment 1) under the heading "Before Leaving the Permanent Berth".

The skipper is responsible for ensuring these activities are completed. At any change of skipper during the day of sailing, the new skipper shall ensure those activities have been completed.

Sailing times

Current bookings are for 9.30am; 10.30am, 11.30am and 12.30pm. Dock to dock sailing time is about 45 minutes.

It is important to keep to these times to ensure the clients time on the water is equitable and maximised.

REMEMBER: SAFETY IS OUR HIGHEST PRIORITY

General

The Skipper and/or crew

- Will decide on the seating arrangements.
- Will assist clients to board and disembark.
- Will ensure the clients and carers are secure and comfortable

Sailing area is at the skipper's discretion. It is normally east of the outer channel markers.

Any incident should be reported to the OOD as soon as possible.

Making Secure at the Permanent Berth

At the completion of a day of sailing, Faith will be returned to the permanent berth and secured as per the Check Sheet (see Attachment 1).

The skipper will ensure these activities are completed.

As per the Check Sheet the skipper will advise the OOD of any maintenance issues and record those issues in the Maintenance book. The skipper will return the motor stop and keys to the normal location.

Separate procedures explain what to do If there is an emergency, or incident such as a Man Overboard etc

ATTACHMENT 1 – Faith Check Sheet

FAITH - Check Sheet

		Page
Before Leaving Permanent Berth	Making Secure at Permanent Berth	
Cockpit	Cockpit	
Close and secure cockpit scuppers	Open cockpit scuppers	
Remove line securing boom and rudder & stow in	Ensure Fenders are secure	
aft storage locker	Secure Boom with line	
Fit MOB retrieval Float Sling	Secure Rudder with Tiller 15° to Port	
Fit MOB Transfer Line by aligning whipping with	Stow MOB Retrieval Float sling	
starboard aft cleat and secure using figure 8	Remove & Stow Transfer Line	
on cleat with Monkey Fist outboard	Remove and Stow Restraint straps	
Ensure Restraint straps available	Fit Winch Covers	
Remove winch covers	Sponge out cockpit storage bins	
Remove hatch and hatch cover	Close hatch and lock cabin	
Sponge out cockpit storage bins	Fit hatch cover	
Motor	Motor	
Adjust motor tilt to vertical position	Remove motor stop and attach to keys Raise motor to highest position Tilt motor Close fuel tank air valve	
Lower Motor 3 stops from top when 2 crew only 2 stops from top when passengers aboard		
Fit motor safety stop		
Release fuel tank air valve		
Check fuel level and fill at DPSS dock if required		
Pump fuel to motor		
Motor ready for operation		
Electrics	Electrics	
Battery Switch Screw to "On" position	VHF to "Off"	
DC Distribution Board VHF to "On" Depth Sounder to "On" Bilge Pump to "On" when no water Pump to "Off" immediately	DC Distribution Board VHF to "Off" Depth Sounder to "Off" Bilge Pump to "On" when no water Pump to "Off" immediately	
VHF to "On" Select Ch 72 Radio check with Support Boat or Dock		
Depth Sounder to "On" Check depth sounder is reading		
Start motor with Electric Start		

FAITH - Check Sheet

Making secure at permanent berth (Continued) ig emove Main halyard & secure to lifeline elease any Mainsail reefs t sail cover Boom Mast (Fit securely to prevent bird nesting) ain sheet - Coil and stow elease Vang oil and Stow headsail Sheets
emove Main halyard & secure to lifeline elease any Mainsail reefs t sail cover Boom
emove Main halyard & secure to lifeline elease any Mainsail reefs t sail cover Boom
elease any Mainsail reefs t sail cover Boom
t sail cover Boom Mast (Fit securely to prevent bird nesting) ain sheet - Coil and stow elease Vang
Mast (Fit securely to prevent bird nesting) ain sheet - Coil and stow elease Vang
bird nesting) ain sheet - Coil and stow elease Vang
ain sheet - Coil and stow elease Vang
elease Vang
ail and Staw handsail Shoots
Furling line
iscellaneous
oil & Stow fore & aft mooring lines used for
PSS dock
tow Skipper & Crew PDFs
eturn Skipper's VHF for charging
eturn keys & motor stop to normal location
eport any maintenance problems to OOD
(

ATTACHMENT 2 – Procedure for Recovery of Man Overboard				